




1

Pre-clean surface to identify damage prior to sanding.



2

Action: Sand out defects as required.
Use: Mirka 77mm Sander with P120 Disc.

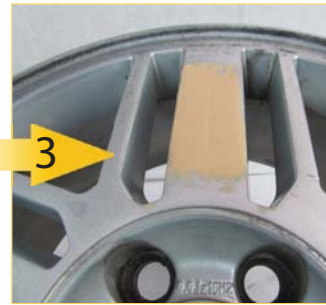

3

Action: Apply filler to damaged area.



4

Action: Sand filler area.
Use: Mirka Abranet P120 followed by P180 Strip. Inspect repair and apply suitable primer.



5

Action: Sand primer.
Use: Mirka 77mm Sander with P500 Disc.



6

Action: To sand and key awkward areas.
Use: Mirka Goldflex Soft P500, or Mirka Grey Mirlon Hand Pad. Inspect prior to top coat application.

			
Mirka 77mm ROS325CV	Mirka 77mm CEROS	Mirka 70x125mm Hand Sanding Block	
			
Mirka 77mm Q.Silver Discs P120-P500	Mirka 70x125mm Abranet Strip P120-P180	Mirka Goldflex Soft Hand Pads P500	Mirka Mirlon Grey Hand Pads